



Busleitung 2 Drhte zum Schaltschrank /zum Modul DPS

HI  
120

HI  
120

HI  
120

HI  
120

85-260AC

USB-485 zum PC  
/Einrichtungsoftware

DIP Einstellung siehe  
Codeliste

Connected to  
Number Distributor

Connect to Door Stations

Outlet Button

DPS

PS5

T/R -  
T/R+  
RS-485

NO  
C  
Z  
+

SET

PA  
PB

XT-DF  
1  
2  
3

L1 L2  
S  
S

+12V  
LK-(GND)  
LK+(COM)  
+NO  
EB+  
EB-

Trunk Bus

Trunk Bus

Trunk Bus

Trunk Bus

Trunk Bus

Trunk Bus

Trunk Bus

Trunk Bus

Trunk Bus

Trunk Bus

Trunk Bus

D C B A

D C B A

D C B A

D C B A

D C B A

D C B A

D C B A

D C B A

DSC-1

DSC-1

DSC-1

DSC-1

DSC-1

DSC-1

DSC-1

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6

ON  
1 2 3 4 5 6