

ENGLISH

# 2 WIRE INTERCOM SYSTEM

---


## USER MANUAL



---

Please read this manual carefully before using the product, and keep it well.


# 1. Parts and Functions

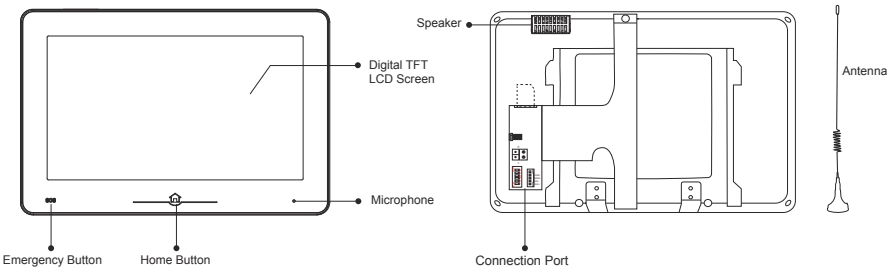

## Key functions



Digital TFT LCD screen	Display the visitors' image
Emergency button	Press it 3 seconds to send the SOS message
Home button	Press it to return home page
Microphone	Receive voice from the user
Speaker	Send out voice from the visitor
Connection port	Bus terminal

## Terminal description

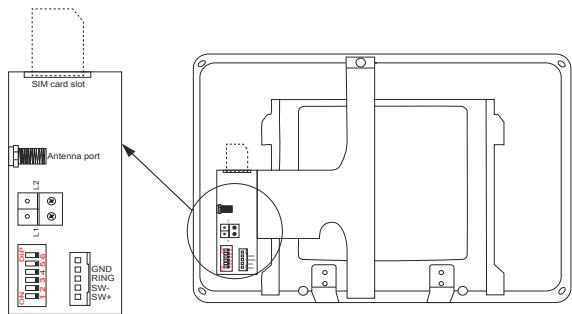

- \* SIM card slot: The place to Install SIM card.
- \* Antenna port: Antenna connection port.
- \* L1,L2: Bus terminal.
- \* SW+,SW-: Door bell call button connection port.
- \* Ring,GND: Extra buzzer connection port.
- \* DIP switches: Total 6 bits can be configured.
- \* Bit1~Bit5: Used to User Code setting.
- \* Bit6: Set to ON if the monitor is at the end of the line or works with DBC4A. Otherwise, set to OFF.

## 2. Monitor Mounting

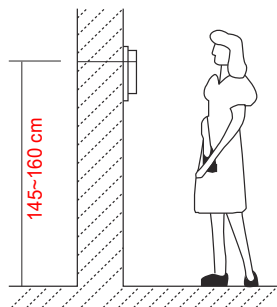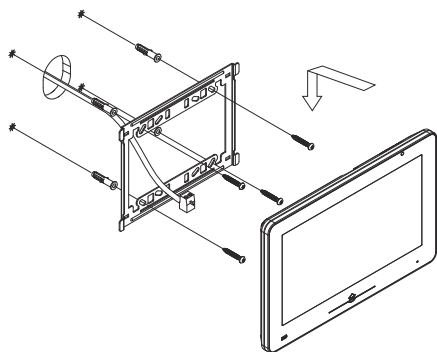



1. Use the screws to fix the Mounting Bracket on the mounting box.(fitting accessories includes a Bracket (Two pieces of 4X25 screws are needed for fastening the Mounting Bracket), Special 2 wire connectors to connect with Monitor)
2. Wire the system correctly(see the later connection chapter) then hang the Monitor on the Mounting Bracket firmly.


## 3. Main Menu





Touch anywhere of the screen on monitor in standby mode, the main menu page will be shown as follows:

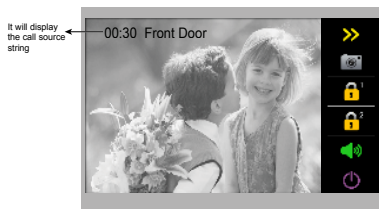


## 4. Basic Door Release Operation

1. Press **CALL** button on outdoor station, the Monitor rings, meanwhile, the screen displays the visitors' image.
2. Touch  icon on screen, you can communicate hands free with the visitor for 90 seconds.After finishing communication, touch  icon again to end the communication. If nobody answers the phone, the screen will be turned off automatically after 40 seconds.




- During talking state, touch  icon to open the door for the visitor.(if two locks are connected to door camera, touch  **unlock 2nd** icon to release the second lock )
- When the monitor is in standby mode, touch  **Monitor** icon on main menu to get into the door camera switching mode, if multi door stations are installed, you can select the door station or CCTV camera you want to monitor, and then the screen can display the view of outside. Press  icon to exit and enter main menu page.

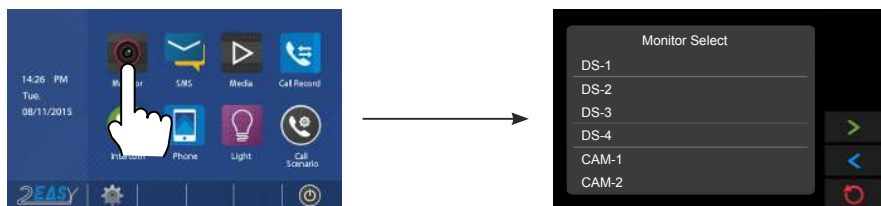


## 5. Pan Tilt & Zoom In/Out Function


During talking or monitoring state, you can zoom in or zoom out the range of monitoring to identify everyone at the entrance. Pan tilt to see individuals up close.

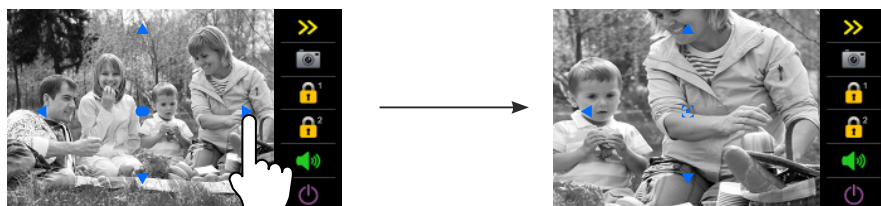






Note that this function requires FishEye of door station support.
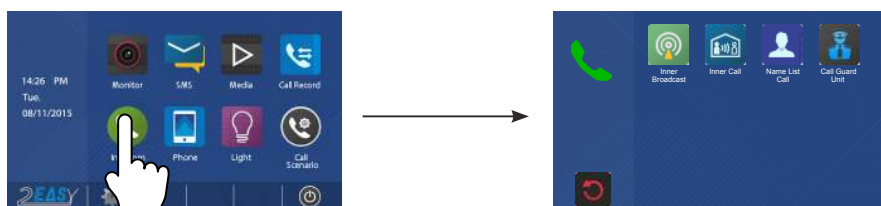
## 6. Intercom Function

Touch  **Intercom** icon on main menu to get into the intercom mode , you have 4 item to select: **Inner Broadcast**, **Inner Call**, **Name List Call** and **Call Guard Unit**.



1. **Inner Broadcast:** If multi slave monitors are installed in the same apartment, select Inner Broadcast, all the other monitors will mandatory receive broadcast content at the same time, whichever slave monitors doesn't need to answer the broadcast, and whichever slave monitors also doesn't need to open the screen. Note that this mode is not supported call between monitors.
2. **Inner Call:** If multi slave monitors are installed in the same apartment, select Inner Call, all the other Monitors will ring at the same time, whichever Monitor answers the call, conversation is started.and the other monitors will stop ringing at the same time.
3. **Name List Call:** User in one apartment can call other apartments in the system. Touch  Name List Call icon on intercom mode menu page, Select a name on the screen then touch  icon to call.Press  /  icon to enter last/next name list page. (Touch Dial Number icon again to redial)

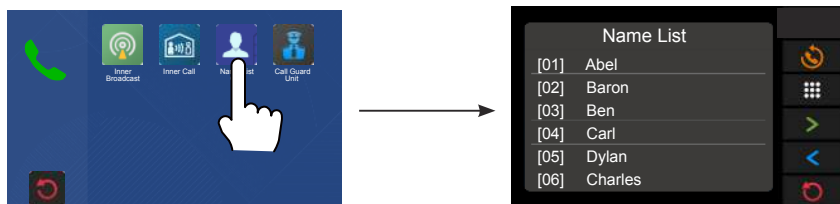


4. **Call Guard Unit:** A Monitor can be assigned as Guard Unit Monitor; when the Guard Unit Monitor answers the call, conversation with the guard person is started..

## 7. Video/Picture Memory





Note: The video/picture memory function is built into the monitor.

### Video/Picture Recording


Both Auto-Recording and Manual-Recording are available. And Auto-Recording is default. If receive a call after 3s, the monitor will record one video/picture automatically.

Or you can touch  icon to record the visitor's video/image manually when the monitor is in monitoring or calling.

## Video/Picture Playback

Touch  **Media** icon on main menu, and touch  **Graphics Playback** icon to play the recorded videos/pictures on screen, please note that touch  icon to Start/Pause the videos recorded. And touch  **Visitor Message** icon to play the visitor message, for details, see section 13.

Note that you can look over the voice prompt, memo information, and you can also copy the image/video to SD card, format SD card.

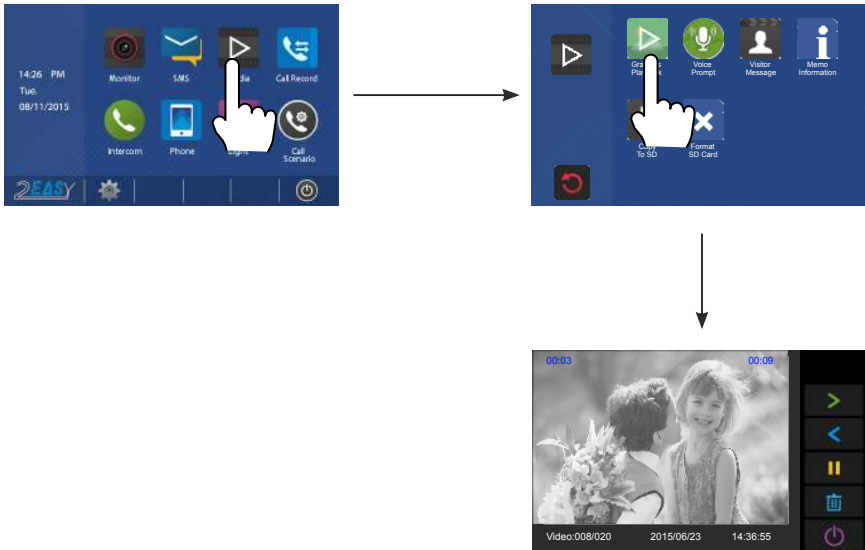

Note: When the system without SD card: 1.118 pictures in inner memory

2.Manage each picture.

When the system with SD card: 1.Only supports writing speeds greater than 4M / s SD card.

2.A brand new SD card needs to be formatted by the monitor, then it can be used for video recording.

3.Up to 32G Micro SD card.



4.Video & Audio record.


5.Manage each video clips.

6.Can be copied.


## 8. Call Record Function


Call Record: All the calls concerning the monitor, including Door-station-to-monitor call, monitor-to-monitor call, will be recorded and can be reviewed afterwards.


Touch  Call Record icon on main menu to get into the call record mode. When there are unread call records, arrow color red. Press the unread call record, and then touch  icon to play it.

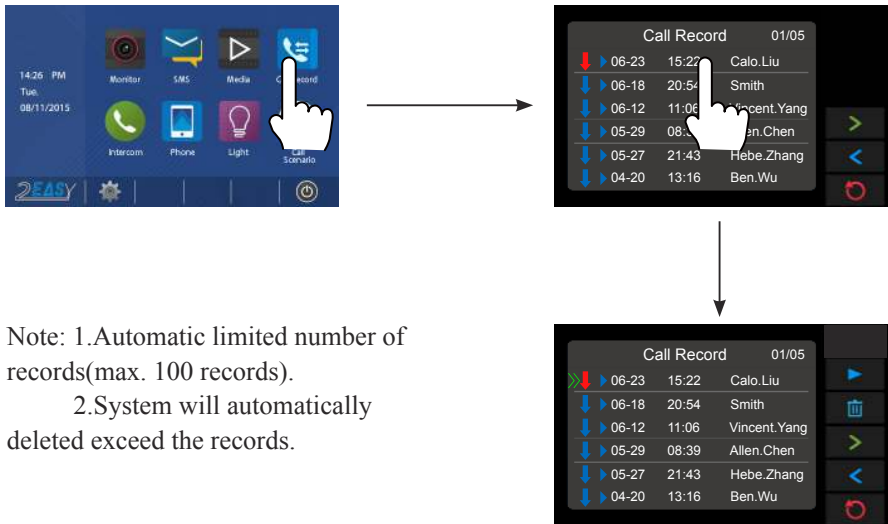


## 9. SMS Function



Touch  SMS icon on main menu to get into the sms mode , you have 3 item to select: **Inbox**, **Outbox** and **Write a SMS**. You can select the appropriate item according to your needs.

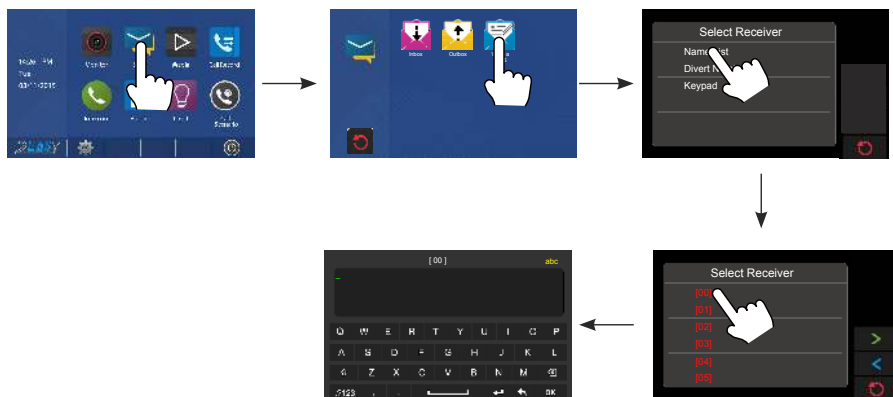
1. **Inbox**: You can view the inbox received the messages sent by other monitors.
2. **Outbox**: You can view the messages by this monitor sent to other monitors in the outbox.
3. **Write a SMS**: When you want to sent messages to other monitors, please touch  **Write a SMS** icon enter the select receiver page, you can choose a item including **Name List**, **Divert Numbers** and **Keypad** at the page. After select the receiver you want, it will enter the editor page, input the messages you want, and then touch 'OK' to send. The steps will be shown as follows:





## 10. Phone Function


Touch  **Phone** icon on main menu to get into the phone mode, you have 3 item to select: **Phone Call**, **Divert** and **Phone Device**.

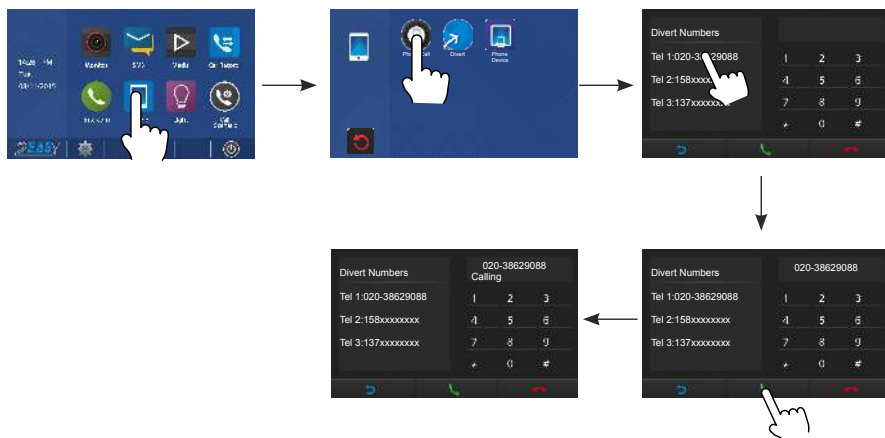Select  **Phone Call** icon to get into the phone call mode page, select the divert number or input the number you want on the digital keypad, and then touch  icon to call the phone.





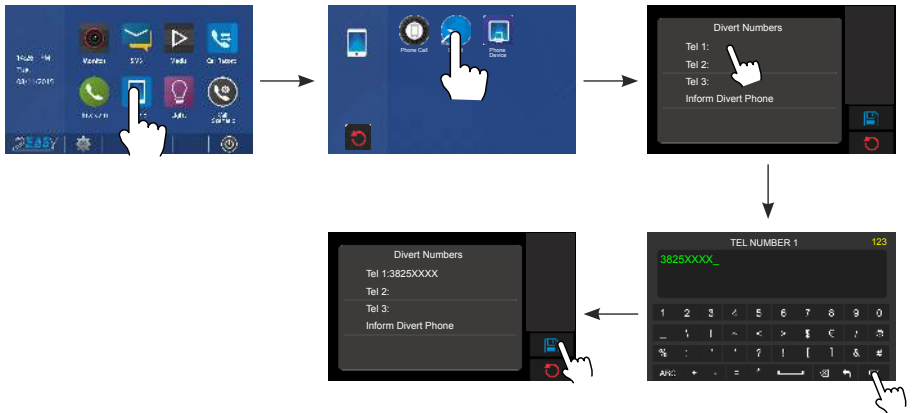

Select  **Divert** icon to get into the divert numbers mode page, touch the empty item, it will enter the editor page, and input the telephone number by pressing the digital keypad, then touch 'OK' return divert numbers mode page, and then touch  icon to save. Note that the system has 2 types of divert modes: Divert-Simutaneously and Divert-If No Answer, for details, see section 12.



Note: Touch  **Phone Device** icon to detect the divert device info.

## 11. Staircase Light

Note: the staircase light function will be activated only when the system connect light via SC6V/RLC module, otherwise, this function is unvalid in normal. For more information, please refer to SC6V/RLC user instruction in detail.

Touch  **Light** icon on main menu page (or touch  icon in monitoring/talking) to open the staircase light, the staircase light will be turned off automatically after 60 seconds.

## 12. Call Scenario Setting

Touch  **Call Scenario** icon on main menu to get into the call scenario mode, you have 6 item to select:

**Normal:** If you select this mode, the monitor as usual.

**Do Not Disturb:** If you select this mode, outdoor station and other monitors can not call the monitor.

**Leave a Message, Immediately:** If you select this mode, when the calls from outdoor station, The system will prompt visitors to leave a voice message, Immediately.

**Leave a Message, If No Answer:** If you select this mode, Outdoor station calls indoor monitor firstly, if nobody answer the call within 30 seconds, the system will prompt visitors to leave a voice message.

**Divert, Simultaneously:** Calls from outdoor station will be diverted to your telephone immediately. At this mode, the monitor won't shut off when TPC/GSM/TPS divert successfully, but if the monitor answers the call at this time, TPC/GSM/TPS will quit absolutely.

**Divert, If No Answer:** Calls from outdoor station without respond in 30 seconds will be transfer to the number you set.

Even though the monitor will shut off when transfer via TPC/GSM/TPS, you still available to operate it (such as monitor, talk, and unlock).

\* Note: The call scenarios setting are the response mode of monitor when outdoor station call.

Some of the advanced features if not inserted SD card does not fully used, such as voice message function.

## 13. Auto Message Function



When you leave home, you can select **Leave a Message, Immediately** or **Leave a Message, If No Answer** in the call scenario page, if receive a call, the monitor can leave a voice message automatically.


If you selecte **Leave a Message, Immediately:** Press **CALL** button on outdoor station, you can hear the message prompt immediately, and then leave a message you want within 10 seconds.

If you selecte **Leave a Message, If No Answer:** Press **CALL** button on outdoor station, if nobody answer the call within 30 seconds, you can hear the message prompt, and then leave a message you want within 10 seconds.

## 14. Basic Setup Instructions



### Sounds Settings

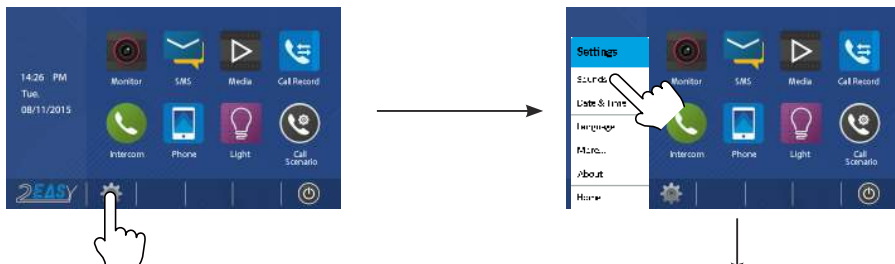
Touch  icon on main menu page, then select **"Sounds"** item to enter the sounds settings page. You can set a variety of ring tones on this page. (touch  icon to exit the setting and return main menu page.




Note: Door Ring have 2 mode: United and Separate. If select "United", it means Door1/2/3/4 as a unity to adjust the ring tones.

### Date & Time Settings

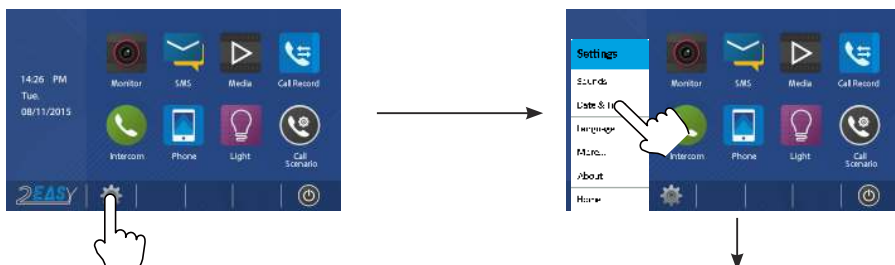

Touch  icon on main menu page, then select **"Date & Time"** item to enter the date & time settings page. You can set the date & time on this page. (touch  icon to exit the setting and return main menu page.

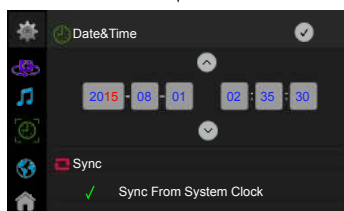


Note: You can set your own time, you can also synchronize the system time.




## Rename & Monitor Time Settings

Touch  icon on main menu page(or on door camera switching mode page), then select **"More..."** item to enter the Rename & monitor time settings page. You can rename door station and camera, change monitor time on this page.(touch  icon to exit the setting and return main menu page)

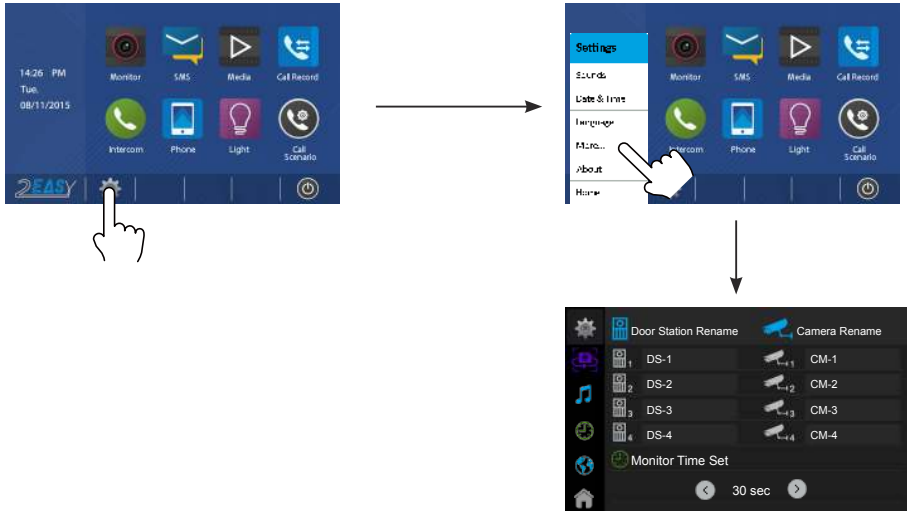


Note: If you want to rename, please touch the place of name, then it will turn keypad page ,you can input your new name in this page.

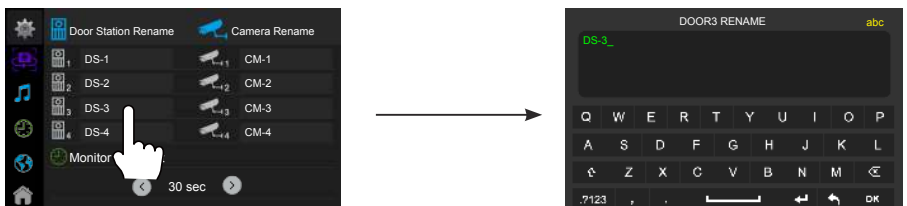


# Screen and Volume Adjustment


During monitoring or talking, touch  icon, the Adjust icon will be displayed.

1. The Scene mode selection: Total 4 screen modes can be selected in sequence: **Normal**, **Brightly**, **Soft** and **User**. Whenever you modify **Brightness** or **colour**, **Scene** item will be set to **User** mode automatically.
2. Note that all the adjust will be performed immediately after the operation. Touch the window of image to exit the adjust page.

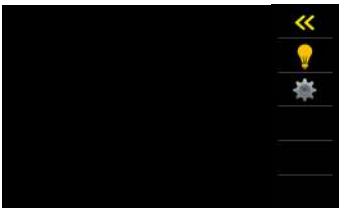



## 15. SOS SMS Function

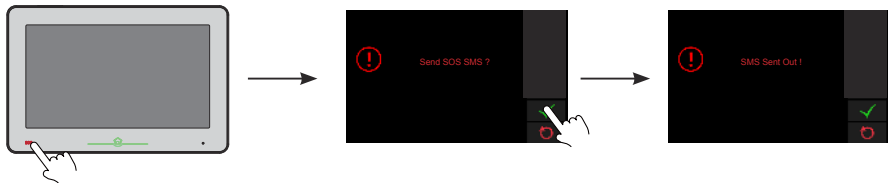
When the monitor is in standby mode, press Emergency button for 3 seconds to enter the SOS SMS page, touch  icon, it will sent "Help" to the divert number you set(see section 10).



## 16. Restore to Default

The restore to default function allows the user to recover the settings to factory setting. Note that the restore to default operation will not change the all setting and datas.

Enter main menu page, touch  icon, then select "About" item (or touch logo position) to enter the about settings page, touch  icon, the default settings will be loaded.

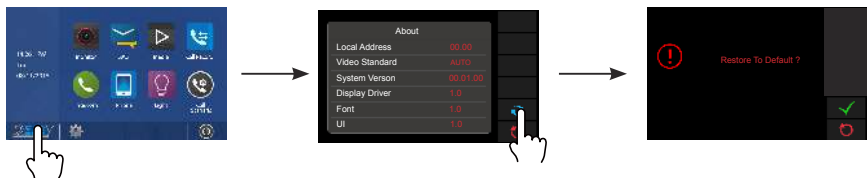


## 17. Monitor Parameter Setting


### How to enter the installation setting page



1.Touch  icon on main menu page.

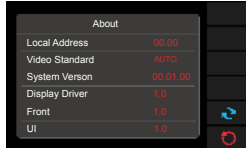

2.Touch and hold 'SOS' button for 2s.

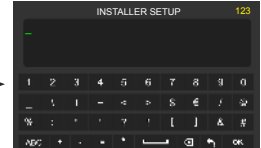

3.A digital keypad will be shown.

### How to set the monitor as a Guard Monitor

A Monitor can be assigned as Guard Unit Monitor; when the Guard Unit Monitor answers the call, conversation with the guard person is started..

The code number of 8004 is used to set the monitor as a guard unit monitor and 8005 is used to cancel this function.

### How to set the slave monitor address

Maximum 4 monitors can be connected in the same address, one master monitor together with 3 slave monitors, so you should set the address correctly.(note:must have one monitor to be set as master monitor)

The code of 8000 is used to set the master monitor.

The code of 8001 is used to set the first slave monitor .

The code of 8002 is used to set the second slave monitor .

The code of 8003 is used to set the third slave monitor .

### How to set date and time format

The system offers two ways of date and time.

The code number of 8008 is used to set the date format as month/date/year

The code number of 8009 is used to set the date format as date/month/year

The code number of 8012 is used to set the time format as 12 hour system

The code number of 8013 is used to set the time format as 24 hour system

## How to set the monitor panel on

In default mode, when receive a calling, the master and slave monitors will ring at the same time, and just the master monitor can display the image while the slave monitors will not. But the settings can be changed, you can set the master monitor and all the slave monitors to panel on at the same time when receiving a call, just input the code number of 8006 on each slave monitor.

Press call button  
on door station



When receiving calling, all monitors can display the image at the same time



Master monitor



#1st slave monitor



#2nd slave monitor



#3rd slave monitor

## How to set the unlock parameter

### Unlock mode:

There are two unlock modes: 1.power-on- to-unlock type:unlock mode=0(by default)  
2.power-off-to-unlock:unlock mode=1.

The code number of 8010 is used to set the unlock mode to 0

The code number of 8011 is used to set the unlock mode to 1

### Unlock time:

The unlock time can be changed by yourself at any time. it can be set from 1 to 99 seconds.


 
 






The code number from 8401 to 8499 are used to set the unlock time to 1~ 99 seconds.

































# How to set the user code for the monitor

In the DT system, every apartment must have a unique identification called User Code. The DIP switches are used to configure the User Code for each Monitor.

- Bit-1 to Bit-5 are used to User Code setting. The value is from 1 to 32, which have 32 different codes for 32 apartments.
- When multi Monitors are installed in one apartment, these Monitors have to use the same User Code setting, and the Master/Slave mode should be set on the Monitor.
- Bit-6 is line terminal switch, which have to be set to ON if the Monitor is in the end of the line (bus), otherwise set to OFF. The end of the line is terminal that no other section will start from it.

Bit-6 line terminal setting:

			<table><tr><th>Bit state</th><th>Setting</th><th>Bit state</th><th>Setting</th></tr><tr><td></td><td>Monitor not at the end of the line.</td><td></td><td>Monitor at the end of the line.</td></tr></table>	Bit state	Setting	Bit state	Setting		Monitor not at the end of the line.		Monitor at the end of the line.
Bit state	Setting	Bit state	Setting								
	Monitor not at the end of the line.		Monitor at the end of the line.								

Bit state	User Code	Bit state	User Code	Bit state	User Code
	Code=1		Code=12		Code=23
	Code=2		Code=13		Code=24
	Code=3		Code=14		Code=25
	Code=4		Code=15		Code=26
	Code=5		Code=16		Code=27
	Code=6		Code=17		Code=28
	Code=7		Code=18		Code=29
	Code=8		Code=19		Code=30
	Code=9		Code=20		Code=31
	Code=10		Code=21		Code=32
	Code=11		Code=22		



## 18. Specification

- Power supply: DC 20~28V
- Power consumption: Standby 20.9mA; Working 350mA
- Monitor screen: 10 Inch digital color TFT
- Display Resolutions: 800\*3(R, G, B) x 480 pixels
- Video signal: 1Vp-p, 75Ω, CCIR standard
- Wiring: 2 wires, non-polarity
- Dimension: 178(H)×268(W)×24(D)mm

DT-ENG-31M/GSM/TD10-V1

---

The design and specifications can be changed without notice to the user. Right to interpret and copyright of this manual are preserved.

---